

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing or in the shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into water or other liquids.
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in.
- 2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
- 5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
- 6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
- 7. Never use while sleeping.
- 8. Never drop or insert objects into any opening.
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being admini stered.

10. Do not use an extension cord to operate dryer.

11. Do not direct hot air toward eyes or other heat-sensitive areas.

12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.

13. Do not place appliance on any surface while operating.

14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.

15. To prolong the life of the dryer, keep filters clean of hair and dust.

16. Do not use with voltage converter.

For a dual voltage hair dryer:

- 17. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in this instruction section of this manual.
- 18. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volts operation.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for professional or household use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110-125 or 220-250 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT SAFETY PLUG INSTRUCTIONS

This hair dryer is equipped with an auto monitoring ALCl safety plug. READ AND SAVE THE INSTRUCTIONS PROVIDED IN A SEPARATE LEAFLET.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair well with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

- 1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through one section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
- 2. Keep dryer's air intake vents unobstructed and free from hair while drying.
- 3. To avoid overdrying and possible damage to hair or skin, do not concentrate heat on one section for any length of time. Keep dryer moving as you style.
- 4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.

5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cooler air.

6. This dryer includes a concentrator attachment. Use the attachment when you need drying power in a small area (such as a curl or a wave), or when you want to relax curly hair.

NANO TITANIUM™

Your Nano Titanium™ dryer has many benefits. Nano Titanium™ is an exceptional conductor of heat and is stable in ultra-high temperatures. The Nano Titanium™ technology uses micro particles of titanium that provide the ultimate heat performance for beautiful, healthy hair results. Nano Titanium™ yields maximum far-infrared heat-penetrating the hair from within for gentle drying without damaging hair. Nano Titanium™ emits negative ions in their most beneficial form for faster drying, locking in hair's own natural moisture. This Nano Titanium™ dryer will give your hair a smooth, silky shine while eliminating frizz.

GET TO KNOW YOUR HAIRDRYER

Model BNT053TUC



ADDITIONAL INFORMATION

FOR DUAL-VOLTAGE DRYERS

For use in North America, the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250-volt supply, use an attachment plug adapter of the proper configuration for the power supply.

For 110-125 Volt Operation

Flick the dual voltage switch to the 125 position. In this position, the dryer has two settings. It provides two speeds and two heat settings — low speed and low heat on LO and high speed and high heat on HI.

For 220-250 Volt Operation

Flick the dual voltage switch to the 250 position. In this position, the dryer has two settings. It provides two speeds and two heat settings — low speed and low heat on LO and high speed and high heat on HI. Do not change to 125 position when operating on 250V. A plug adapter may be necessary in certain countries.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, gently toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently. If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or an authorized Rusk service representative only. No repairs should be attempted by the consumer.

STORAGE - IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. The dryer must be kept clean for proper operating performance. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat.

If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

WHY DO YOU NEED A GFCI?

Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...even if the switch is off. A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the flow of electricity.

STOP

This message about...

GROUND FAULT

CIRCUIT INTERRUPTERS

...can save a life!

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, Babyliss Pro ("Babyliss Pro") warrants that the BabylissPRO® Folding Travel Dryer ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of ONE (1) year beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Babyliss Pro or an authorized Babyliss Pro reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Babyliss Pro reseller, contact Babyliss Pro).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Babyliss Pro;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Babyliss Pro approval;

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Babyliss Pro will, at its option, repair the Product or replace the Product with another identical or reasonably equivalent product, or if Babyliss Pro is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at feedback@babylisspro.com, or call our Consumer Service Center toll-free at 1-800-326-6247 to speak with a representative.

Upon receipt of the Product, Babyliss Pro will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Babyliss Pro's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Babyliss Pro's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-326-6247 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The ONE (1) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells BaBylissPRO® products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Babyliss Pro for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-326-6247. Babyliss Pro will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED,

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. BABYLISS PRO'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BABYLISS PRO IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF BABYLISS PRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS

YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Babyliss Pro Division
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

©2026 Distributed by BaBylissPRO,
Stamford, CT 06902

22BA083702

IB-17673C

INSTRUCCIONES/ GUÍA DE PEINADO DEL SECADOR NANO TITANIUM™

Modelo BNT053TUC

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

