

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including:

KEEP OUT OF REACH OF CHILDREN!

**READ ALL INSTRUCTIONS
KEEP AWAY FROM WATER!**

DANGER — As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug immediately after using.
- Always turn off the iron when not in use.
- Do not use while bathing or in the shower.



- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in, or drop into water or other liquids.
- If the iron falls into water, unplug it immediately. Do not reach into the water.

LIMITED 2-YEAR WARRANTY (For U.S. and Canada only)

BabylissPro will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$10.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-326-6247 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BABYLISPRO BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- Plug the iron into an electrical outlet.
- The iron should never be left unattended when plugged in.
- Do not pull, twist, or wrap cord around the iron.
- This iron should not be used by, on, or near children or individuals with certain disabilities.
- Use the iron only for its intended use as described in this guide.
- Do not use attachments not recommended by the manufacturer.
- Never operate this iron if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged or has fallen into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening or hole in the iron.

WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

SERVICE CENTER

BabylissPro
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

For Canada

Please return your defective appliance to your distributor, or to:
ATTN: DANNYCO PROFESSIONAL SERVICE CENTER
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge, Ontario
L4H 0L2

DANNYCO PROFESSIONAL'S SERVICE CENTRE:
1-800-363-0707, or email us at
customerservice@dannyco.com.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use an extension cord with the iron.
- Avoid multiple cables to a plug.
- The iron and casing are hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the iron directly on any surface while it is hot or plugged in.
- Do not touch hot surfaces of the iron.
- This iron has no user-serviceable parts. Servicing should only be performed by an authorized service representative.
- Suitable for dry locations ONLY.
- After using, ensure the iron has completely cooled before storing in a safe, dry location.
- Do not use this appliance near bathtubs, showers, toilets or any other receptacle containing water.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Before plugging in, read the information about dual voltage contained in the "dual voltage" section of this manual.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (50-60Hz) only. Standard appliances are designed to operate at rated voltage.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This curling iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

IMPORTANT NOTICE

These styling appliances have a special protective application and the barrel will be extremely hot when the temperature regulator dial is set at its highest setting. Extra care should be taken when using. This product may emit smoke during initial use. The smoke is not harmful and will quickly disappear. It is only the protective application on the heating element being burned off.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

FOR TOUSLED HAIR

Create soft, tousled waves by curling each hair section in a random direction. Then turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.

FOR WIDE WAVES

Pick up a section of hair and place the curling iron under it, close to the scalp, making a half turn downward. Remove the curling iron. Working with the same hair section, start where you left off and place the curling iron on top of the hair, curling

it up a half turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6–8 inches long.

CURLING IRON BASICS

1. Plug the appliance into a standard electrical outlet.
2. Power on the iron and choose a desired temperature.
3. Use the +/- temperature controls to select the setting for your hair type. You can use the chart outlined below as a reference. The iron will heat up very quickly.

TEMPERATURE SETTINGS	HAIR TYPE
265°F (130°C) - 300°F (150°C)	Fragile, very fine hair
320°F (160°C) - 340°F (170°C)	Thin, easy-to-curl hair
355°F (180°C) - 375°F (190°C)	Normal textured hair
395°F (200°C) - 410°F (210°C)	Wavy or curly hair
410°F (210°C) - 430°F (220°C)	Coarse, very thick hair

The selected temperature automatically locks after 3 seconds. To unlock/change the temperature, press and hold the +/- temperature controls for 2 seconds.

TEMPERATURE MEMORY FUNCTION: the iron automatically reverts to the last temperature selected when powered on.

4. Section hair evenly, and comb each section before winding. Place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.
5. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8–12 seconds. For looser, free-flowing curls, roll more hair. For tighter, bouncier curls, roll less hair.
6. To remove curling iron, unwind the hair. To set the curl, do not comb or brush hair until it cools.
7. Some experimenting is necessary when first using the curling iron or when changing to a different hairstyle.

GRAPHITE + TITANIUM


- Graphite's extremely smooth surface reduces friction on the hair.

- Graphite + Titanium's heat conductivity accelerates heat transfer to help maintain even, stable temperatures, and excellent heat recovery for super-efficient styling results.

- Graphite + Titanium's strength delivers a styling tool that will stand up to the rigors of daily salon use, day-in day-out.

GET TO KNOW YOUR PROFESSIONAL CURLING IRON

Available Barrel Sizes:
BGT75UC - ¾"
BGT100UC - 1"
BGT125UC - 1¼"

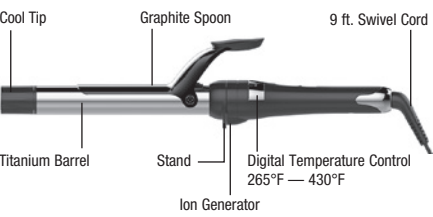

NOTICE

THIS PRODUCT IS EQUIPPED WITH AN INSTANT HEAT CIRCUITRY.

DO NOT LEAVE PRODUCT ON OR PLUGGED IN WHILE NOT IN USE. UNIT WILL BURN OUT IF POWER IS KEPT ON FOR AN EXTENDED PERIOD OF TIME. WARRANTY WILL BE VOIDED. TURN UNIT OFF AND UNPLUG WHEN NOT IN USE.

USER MAINTENANCE

Your iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow unit to cool, then simply put back in the box and store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

**WARNING:
IF YOU THINK
THE POWER IS
OFF WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

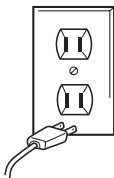

Everyone knows that electricity and water are a dangerous combination, but did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES.**

INSTRUCCIONES DE OPERACIÓN

Este aparato ha sido diseñado para uso profesional. Utilícelo solamente con corriente alterna (50-60Hz). Los aparatos estándares están diseñados para funcionar con corriente nominal.

El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, aquel enchufe se podrá enchufar de una sola manera en las tomas de corriente polarizadas. Si el enchufe no entra en la toma de corriente, inviértelo. Si aun así no entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

DOBLE VOLTAJE

Este aparato es doble voltaje. Se adaptará automáticamente al voltaje correcto. Sin embargo, se deberá utilizar un adaptador adecuado (no se incluye) para poder conectar el aparato al tomacorriente.

AVISO IMPORTANTE

El Barril de este aparato está cubierto con un revestimiento protector que se quemará cuando lo use por primera vez humo. El humo no es peligroso y se dispersará rápidamente. El Barril se pone muy caliente; manipule el aparato con sumo cuidado.

GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza por un corte de cabello bien mantenido. Siempre cuide su cabello con champús, acondicionadores y productos de peinado de calidad superior.

RIZOS NATURALES

Para crear ondas suaves y naturales, rice cada sección en direcciones elegidas al azar. Después, incline la cabeza hacia abajo, agítela y estruje el cabello con los dedos. Repita para obtener más cuerpo.

ONDAS SUELTAS

Comience cerca del cuero cabelludo. Coloque una sección de cabello entre El barril y la cuchara, y dele media vuelta hacia abajo. Retire el aparato. Ahora, coloque el aparato un poco más abajo, El Barril arriba, y dele media vuelta hacia arriba. Siga alternando los rizos hacia arriba/abajo hasta llegar a las puntas. Repita la misma técnica todo alrededor de la cabeza. Obtendrá resultados óptimos con cabello de 15 a 20 cm de largo.

FUNDAMENTOS DEL RIZADO

1. Enchufe el aparato en una toma de corriente.
2. Encienda la unidad y ajuste la temperatura al nivel deseado.
3. Ajuste la temperatura al nivel deseado según su tipo de cabello (véase la tabla a continuación). El aparato calentará muy rápidamente.

AJUSTE DE TEMPERATURA	TIPO DE CABELLO
265°F (130°C) - 300°F (150°C)	Cabello frágil, muy fino
320°F (160°C) - 340°F (170°C)	Cabello fino, dócil
355°F (180°C) - 375°F (190°C)	Cabello normal
395°F (200°C) - 410°F (210°C)	Cabello ondulado o rizado
410°F (210°C) - 430°F (220°C)	Cabello grueso, muy espeso

La temperatura seleccionada se bloquea automáticamente después de 3 segundos. Para desbloquear / cambiar la temperatura, presione y mantenga presionados los controles de temperatura +/- durante 2 segundos.

FUNCIÓN DE MEMORIA DE TEMPERATURA: la plancha vuelve automáticamente a la última temperatura seleccionada cuando se enciende.

4. Divida el cabello en secciones uniformes y peine cada sección. Coloque el aparato a medio camino en una sección de cabello y distribuya el cabello uniformemente entre El barril y la cuchara. Para evitar tener las puntas encrespadas, asegúrese de que están firmemente posicionadas entre El barril y la cuchara, en la dirección deseada.
5. Enrolle el cabello hacia el cuero cabelludo, sin que el aparato llegue a tocar el cuero cabelludo. Mantenga el aparato en posición por 8 a 12 segundos. Para obtener rizos sueltos y naturales, enrolle secciones más gruesas. Para obtener rizos apretados y elásticos, divida el cabello en secciones más delgadas.
6. Desenrolle lentamente el cabello. Permita que el cabello se enfríe antes de peinarlo para "fijar" los rizos.
7. Será necesario experimentar un poco al principio.

©2019 Babyliss S.A.R.L.



- No coloque ni guarde el aparato donde

