

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including:

- KEEP OUT OF REACH OF CHILDREN!
- READ ALL INSTRUCTIONS BEFORE USING
- KEEP AWAY FROM WATER!

DANGER – As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug immediately after using.
- Always turn off the iron when not in use.
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquids.
- If the iron falls into water, unplug it immediately. Do not reach into the water.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

- Plug the iron into an electrical outlet.
- The iron should never be left unattended when plugged in.
- Do not pull, twist, or wrap cord around the iron.
- This iron should not be used by, on, or near children or individuals with certain disabilities.
- Use the iron only for its intended use as described in this guide.
- Do not use attachments not recommended by the manufacturer.
- Never operate this iron if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged or has fallen into water. Return the appliance to an authorized service center for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.

- Never drop or insert any object into any opening or hole in the iron.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with the iron. Avoid multiple cables to a plug.
- The iron and casing are hot when in use. Do not let eyes and bare skin touch heated surfaces.
- Do not place the iron directly on any surface while it is hot or plugged in.
- Do not touch hot surfaces of the iron.
- This iron has no user-serviceable parts. Servicing should only be performed by an authorized service representative.
- Ensure the iron has completely cooled before being placed into any storage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Before plugging in, read the information about dual voltage contained in the "DUAL VOLTAGE" section of this manual.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for professional or household use. Use on alternating current (50-60Hz) only. Standard appliances are designed to operate at 120-240V--.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE
This flat iron has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug (not included) with correct configuration, prior to use in outlet.

STRAIGHTENING BASICS

- Plug the straightening iron into a standard electrical outlet. It is not necessary to touch the iron with your hand to judge readiness.
- Use the temperature controls to select the setting for your hair type. You can use the chart outlined below as a reference. The iron will heat up very quickly.

TEMPERATURE SETTINGS	HAIR TYPE
300°F (150°C)	Fragile, very fine hair
340°F (170°C)	Thin, easy-to-straighten hair
375°F (190°C)	Normal textured hair
410°F (210°C)	Wavy or curly hair
450°F (230°C)	Coarse, very thick hair

- Section dry hair evenly, and comb each section. Position the iron on the hair as far up as you want hair to be straightened, being careful not to let the iron touch the scalp. Close the iron with the hair between the two plates and gently pull the iron down to the end of the section of hair you are straightening. Repeat this process several times, if necessary. Let the hair cool before combing.

STYLING TIPS USING STRAIGHTENER

For short, spiky looks use gel or spray and hold the sections up and away from the head while you straighten. For smoothing and taming curly hair, or creating a stylish, smooth bob, use the straightener just on the ends, leaving the hair wavy at the roots for lift and body. For this type of effect, keep the straightener moving while following the shape of your hairstyle.

TITANIUM TECHNOLOGY

Your titanium iron has many benefits. Titanium is an exceptional conductor of heat and is stable in ultra-high temperatures. The titanium plate provides the ultimate heat performance for beautiful, healthy-looking hair and yields maximum far-infrared heat, penetrating the hair for gentle styling without damaging hair. Titanium emits natural ions for faster styling, locking in hair's own natural moisture. This titanium iron will give your hair a smooth, silky shine while eliminating frizz.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, BaByliss Pro will, at its option, repair the Product or replace the Product with another identical or reasonably equivalent product, or if BaByliss Pro is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at feedback@babylisspro.com, or call our Consumer Service Center toll-free at 1-800-326-6247 to speak with a representative.

- Damage caused by the Product, BaByliss Pro will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond BaByliss Pro's control, in which case that time period may be extended as reasonably necessary.


IMPORTANT: If the nonconforming Product is to be serviced by someone other than BaByliss Pro's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-326-6247 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The FOUR (4) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells BaBylissPRO® products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to BaByliss Pro for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-326-6247. BaByliss Pro will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED,

GET TO KNOW YOUR PROFESSIONAL STRAIGHTENER

Model BNT4090T

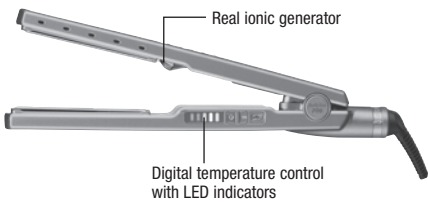

NOTICE

THIS PRODUCT IS EQUIPPED WITH AN INSTANT HEAT CIRCUITRY.

DO NOT LEAVE PRODUCT ON OR PLUGGED IN WHILE NOT IN USE. UNIT WILL BURN OUT IF POWER IS KEPT ON FOR AN EXTENDED PERIOD OF TIME. WARRANTY WILL BE VOIDED. TURN UNIT OFF AND UNPLUG WHEN NOT IN USE.

USER MAINTENANCE

Your styler is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, let it cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: BaBylissPRO®

Model No.: BNT4090T

Description: Straightener

Responsible Party: Conair LLC
1 Cummings Point Road
Stamford, CT 06902
(203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 12/27/2024

WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination, but did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES.

This Limited Warranty is issued by:

BaByliss Pro Division
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

©2025 Distributed by BaBylissPRO,
Stamford, CT 06902

Model BNT4090T

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

¡MANTÉNGALO FUERA DEL ALCANCE DE LOS NIÑOS! LEA TODAS LAS INSTRUCCIONES ANTES DEL USO ¡MANTÉNGALO ALEJADO DEL AGUA!

PELIGRO

Como es el caso de la mayoría de los aparatos eléctricos, los componentes eléctricos de este aparato permanecen en tensión cuando esté enchufado, incluso si está apagado. Para reducir el riesgo de electrocución:

- **Siempre desenchufe el aparato inmediatamente después del uso.**
- Siempre apague el aparato cuando no esté en uso.
- No lo use en el baño o la ducha.
- No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer al agua u otros líquidos.

DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR

Marcas: BaBylissPRO®

Modelo: BNT4090T

Descripción: Plancha alisadora

Parte responsable: Conair LLC
1 Cummings Point Road
Stamford, CT 06902
(203) 351-9000

Normas: Normas de la FCC, Sección 15, subsección B, ANSI C63.4-2014

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes:

(1) Este artefacto no debe causar ninguna interferencia perjudicial, y 2) este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que puedan causar un funcionamiento no deseado.

FECHA DE PUBLICACIÓN: 27/12/2024

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA.



Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece en tensión, aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

- Si el aparato se cae al agua, desenchúfelo inmediatamente; **no intente alcanzarlo en el agua.**
- **ADVERTENCIA** — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:
 - Enchufe el cable en una toma de corriente.
 - Nunca descuide/deje el aparato sin vigilancia mientras está enchufado.
 - **No jale, retuerza ni enrolle el cable alrededor del aparato.**
 - Este aparato no debe ser usado por, en o cerca de niños o personas con ciertas discapacidades.
 - Use este producto solo para el uso previsto y como se describe en este manual.
 - Solo use accesorios recomendados por el fabricante.
 - **No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de una caída/caída en agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
 - Mantenga el cable lejos de las superficies calientes. No enrolle el cable alrededor del aparato.
 - Nunca obstruya los orificios de ventilación, ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.
- No lo use mientras duerme.
- Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
- No lo use en exteriores, ni donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
- No use un cable alargador/de extensión con este aparato. Evite conectar varios aparatos a la misma toma de corriente.
- El aparato pone muy caliente durante el uso; mantenga los ojos y la piel alejados de las superficies calientes.
- No coloque el aparato en ninguna superficie mientras esté caliente o enchufado.
- No toque las superficies calientes del aparato.
- Este aparato no contiene ninguna pieza que pueda ser reparada/reemplazada por el usuario. Cualquier tipo de reparación/ajuste debe ser realizado únicamente por un técnico autorizado.
- Deje que el aparato se enfríe completamente antes de guardarlo.
- Para su seguridad, si el cable está dañado, debe ser sustituido por el fabricante, un técnico autorizado, u otra persona calificada.
- Los niños o las personas que carezcan de la experiencia o de los conocimientos necesarios para manipular el aparato, o aquellas cuyas capacidades físicas, sensoriales o mentales estén limitadas, no deben usar el aparato sin la supervisión o

la dirección de una persona responsable por su seguridad.

- No deje que los niños jueguen con este aparato.
- Antes de enchufar el aparato, lea la sección “DOBLE VOLTAJE”.

GUARDE ESTAS INSTRUCCIONES DE USO

Este aparato ha sido diseñado para uso profesional o doméstico. Úselo solamente con corriente alterna (50/60 Hz). Los aparatos estándares están diseñados para funcionar con corriente de 120-240 V~.

El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, aquel enchufe se podrá enchufar de una sola manera en las tomas de corriente polarizadas. Si el enchufe no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente modificar esta función de seguridad.

DOBLE VOLTAJE

Este aparato es de doble voltaje. Se adaptará automáticamente al voltaje adecuado. Nota: Puede que sea necesario usar un adaptador de viaje (no incluido).

FUNDAMENTOS DEL ALISADO

1. Conecte el cable a una toma de corriente. No es necesario tocar las placas para cerciorarse que está listo.
2. Ajuste la temperatura al nivel deseado según su tipo de cabello (véase la tabla a continuación). El aparato calentará muy rápidamente.

AJUSTE DE TEMPERATURA	TIPO DE CABELLO
300°F (150°C)	Cabello frágil, muy fino
340°F (170°C)	Cabello fino, dócil
375°F (190°C)	Cabello normal
410°F (210°C)	Cabello ondulado o rizado
450°F (230°C)	Cabello grueso, muy espeso

3. Divida el cabello seco en secciones uniformes y peine cada sección. Coloque la plancha cerca del cuero cabelludo, sin permitir que las placas toquen este. Abra las placas y coloque una sección de cabello entre ellas. Cierre las placas y baje la plancha lentamente hasta las puntas, manteniendo las placas bien cerradas. Alise cada sección varias veces si es necesario. Permita que el cabello se enfríe antes de peinarlo.

CONSEJOS PARA UN MEJOR ALISADO


Para obtener un efecto de punta en cabello corto, aplique gel o spray al cabello y estire las secciones hacia arriba mientras alisa el cabello. **Para alisar y suavizar el cabello rizado** o crear un “bob” terso y moderno, use el aparato en las puntas únicamente, dejando ondas en las raíces para crear cuerpo y movimiento. Mantenga la plancha en movimiento constante y siga la forma del peinado.

TECNOLOGÍA CON TITANIO

Su plancha con titanio brinda muchas ventajas. El titanio es un conductor térmico excepcional que mantiene la estabilidad en temperaturas ultra-altas. El titanio proporciona un rendimiento óptimo y deja el cabello hermoso y resplandeciente de salud. Genera calor infrarrojo lejano, un calor suave que penetra en el tallo del pelo para peinar el cabello desde el interior, sin dañarlo. El titanio también emite iones, los cuales logran un secado más rápido mientras preservan la hidratación del cabello. Este aparato dejará su cabello suave, sedoso y brillante, al mismo tiempo que eliminará el frizz.

FAMILIARÍCESE CON SU PLANCHA ALISADORA PROFESIONAL

Modelo BNT4090T
Placas de 25 mm

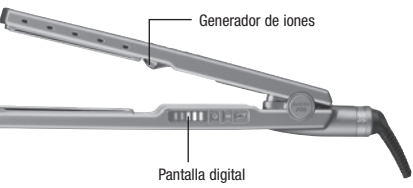

INSTRUCCIONES DE MANTENIMIENTO

Este aparato requiere poco mantenimiento. No requiere lubricación. Mantenga todos los orificios de ventilación y aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, deje que se enfríe y limpie el exterior con un paño limpio. En caso de mal funcionamiento, desenchufe el aparato, deje que se enfríe y devuélvalo a un centro de servicio autorizado. No intente repararlo.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su rotura o un cortocircuito. Revise el cable a menudo para comprobar que no esté dañado. Interrumpa inmediatamente el uso si el cable está visiblemente dañado o si el producto deja de funcionar, o funciona de forma intermitente.

ALMACENAMIENTO

Cuando no esté en uso, este aparato es fácil de almacenar. Deje que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Deje que el cable cuelgue, o que la junta que lo conecta al aparato esté suelta y recta.

AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad pueden rescindir el permiso del usuario para operar el equipo.

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no debe causar ninguna interferencia perjudicial, y (2) este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que puedan causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo produce alguna interferencia perjudicial en la

recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.
- Conectar el equipo a un circuito distinto al que está conectado el receptor.
- Consultar con el distribuidor o un técnico especializado en radio/TV.

ESTA GARANTÍA LIMITADA LE OTORGA DERECHOS LEGALES ESPECÍFICOS, Y TAMBIÉN PUEDE TENER OTROS DERECHOS QUE VARIÁN DE UN ESTADO A OTRO O EN FUNCIÓN DE LA JURISDICCIÓN. EN CASO DE INCUMPLIMIENTO DE ESTA GARANTÍA LIMITADA, USTED PUEDE RECLAMAR LA SUSTITUCIÓN, UNA INDEMNIZACIÓN POR DAÑOS Y PERJUICIOS U OTRAS SANCIONES.

LIMITACIONES DE RESPONSABILIDAD/ LIMITACIONES Y EXCLUSIONES ADICIONALES

TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. LA RESPONSABILIDAD DE BABYLISS PRO BAJO ESTA O CUALQUIER OTRA GARANTÍA, IMPLÍCITA O EXPRESA, SE LIMITA A LA REPARACIÓN, SUSTITUCIÓN O REEMBOLSO, SEGÚN LO ESTABLECIDO ANTERIORMENTE. ESTOS RECURSOS SON LOS ÚNICOS Y EXCLUSIVOS EN CASO DE INCUMPLIMIENTO DE LA GARANTÍA. EN LA MEDIDA MÁXIMA PERMITIDA POR LA LEY, BABYLISS PRO NO SE HACE RESPONSABLE DE NINGÚN DAÑO DIRECTO, INDIRECTO, ESPECIAL, INCIDENTAL O CONSECUENTE RESULTANTE DE CUALQUIER INCUMPLIMIENTO DE LA GARANTÍA O BAJO CUALQUIER OTRA TEORÍA LEGAL (INCLUYENDO, PERO NO LIMITADO A, LUCRO CESANTE, TIEMPO DE

Esta Garantía Limitada es emitida por:

BaByliss Pro, una división de
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-326-6247

PLANCHA ALISADORA PROFESIONAL

Modelo BNT4090T

Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.

IB-24/396